



INSTALLATION STEPS

**ATTENTION:** Risk of fire and electrical shock - fixture to be installed by qualified contractor according to local codes and ordinances

- 1** [A] - Drill mounting and power feed holes in fixture housing. Place holes in position to prevent interference with driver  
 [B] - Power feed connections: White+, Black-, Green, (if dimming is required): Purple Dim+, Grey Dim-  
 [C] - Mount fixture to ceiling (hardware provided by others)  
**For rows proceed to step 2, for single light engine units proceed to step 4**
- 2** [A] - Housing connections: White+, Black-, Green, (if dimming is required): Purple Dim+, Grey Dim-  
 [B] - Align corner pins and connect fixture housings with rubber mallet until no gap remains.  
 [C] - Secure sections with joiner screws.
- 3** [A] - Align light engine section ends with appropriate lettering.  
 [B] - Attach safety tether on each light engine with provided flange nut.  
 [C] - Light engine connections: White+, Black-, Green, (if dimming is required): Purple Dim+, Grey Dim-  
 [D] - Raise light engine sections into housing until spring brackets secure on inside of housing.  
**Repeat steps for all light engines**

- 4** [A] - Attach safety tether on each light engine with provided flange nut.  
 [B] - Light engine connections: White+, Black-, Green, (if dimming is required): Purple Dim+, Grey Dim-  
 [C] - Raise light engine into housing until spring brackets secure on inside of housing.
- 5** **Service and Maintenance**  
 [A] - Insert screw driver into end baffle hole and slide downwards  
 [B] - Remove light engine for service.